

EE Honda CRF - X Front Wheel Spacer/Odo Drive Eliminator Installation #16-683 Instructions

- 1 Place motorcycle on a stand so that the front wheel is off the ground.
- 2 Using a 22mm socket remove the front axle nut. Using a 10mm socket, loosen the four front axle pinch bolts. Slide front axle out of forks and remove front wheel.
- 3 Pull the speedometer drive (Figure 1) off of the right side of the wheel. Pull the wheel spacer out of the center of the grease seal on the left side of the hub.
- 4 **If you are not eliminating your speedometer drive unit:** Insert the speedometer drive unit into the center of the wheel hub. Make sure that you engage the drive tabs of the speedometer drive unit (Figure 2) with the machined slots of the hub (Figure 3) Move to step 6.

If you will be eliminating your speedometer drive unit: Tap the new grease seal in place on the right side of the hub with the spring on the seal facing in towards the center of the wheel. Push the aluminum spacer in the center of the seal. (Figure 4) Move to step 6.

- 5 Slide wheel back into the front forks and reinstall the axle and axle nut.
NOTE: IF YOU ARE NOT ELIMINATING THE SPEEDOMETER DRIVE UNIT, MAKE SURE YOU PROPERLY POSITION THE SPEEDOMETER DRIVE UNIT AS SHOWN IN (Figure 5) BEFORE YOU TIGHTEN THE FRONT AXLE NUT. Torque axle nut to motorcycle manufacturer's torque specifications. If the axle spins, snug up the right side axle pinch bolts and then torque axle. Then loosen the right side axle pinch bolts and let the fork leg float on the axle and self align itself parallel with the left fork. Torque all four pinch bolts to the motorcycle manufactures specifications. Pump the front brake lever to make sure the brake pads are seated to disc and are stopping properly.

WARNING: The bearings will be damaged during the removal process and should not be reused. The hammer blows transmit their impact through the balls causing small flat spots, which will cause the bearing to quickly fail if reused.

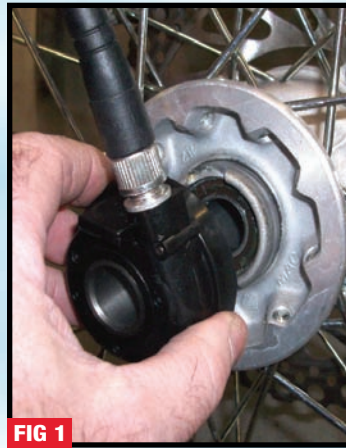


FIG 1

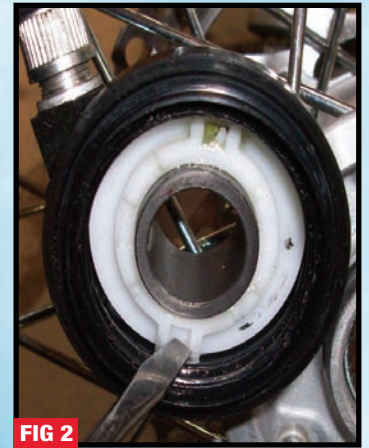


FIG 2



FIG 3

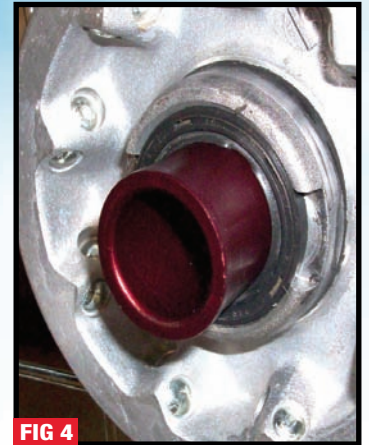


FIG 4

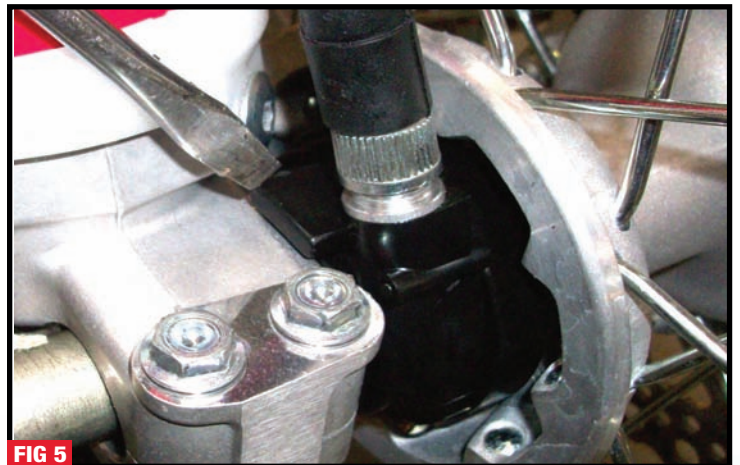


FIG 5

INSTRUCTIONS, WARNING AND DISCLAIMER:

WARNING: Failure to read these warnings and follow these instructions could lead to loss of control of the motorcycle, an accident, severe injury or death.

WARNING: Do not ride with loose or worn wheel bearings or wheel bearing components. Always check the fasteners for tightness and that the wheels are free moving and in proper working order before every ride. Loose, worn or inappropriately installed wheel bearings may result in loss of control, injury or death.

CAUTION: Use only genuine Enduro Engineering replacement parts if any of the wheel bearing components become worn or damaged.

INSTRUCTIONS:

Carefully and closely follow the installation instructions provided with these wheel bearings. If you are not qualified to properly install this product, have the wheel bearings installed by a licensed motorcycle technician.

If you have any questions regarding the use, fit or installation of this product, please contact your local Enduro Engineering dealer, call us at (517) 393-2421 or email us at info@enduroeng.com

WARNING AND DISCLAIMER:

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty). EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose. R.JRF.Sec.randt.warninganddisclaimer.5.2.08



QUALITY OFF-ROAD MOTORCYCLE PRODUCTS

INSTRUCTIONS

Honda CRF - X Front Wheel
Spacer/Odo Drive Eliminator
Part# 16-683